

Instructions for care

Kitchen faucet require special care. Therefore, please observe the following instructions:

- Chrome-plated surfaces/stainless steel look surfaces are sensitive to lime-dissolving agents, acidic cleaning agents and all kinds of abrasives.
- Never clean colored surfaces with abrasive, corrosive, or alcohol-based cleaners.
- Only clean your kitchen faucet with clear water and a soft cloth or a chamois.
- Please make sure that no detergent is allowed to enter the cartridge enclosure as this can cause the lever to become stiff and cause noises.

Do not forget to unscrew the faucet nozzle at regular intervals and to remove calcareous residues or foreign matter. By rinsing the faucet nozzle. It is advisable to replace the faucet nozzle with a new one in the case of extreme contamination.

Maintenance

- Please note that a cartridge is an expendable part, and that the cartridge may need to be replaced every 1-2 years if the water has high levels of limescale or dirt. Please contact the service hotline if further details are required.
- Please check all joints and connections for leaks or visible damages at regular intervals.
- In case of leaks or visible damages to the fitting or connection hoses; these shall be immediately checked and replaced by suitably qualified professional with relevant license(s) for plumbing.

