

Scalding protection

Adjusting the scald guard

The cartridge in the kitchen faucet comes with an adjustable scald guard (for limiting the flow of hot water). The scald guard comes in neutral setting.

Attention: Do not adjust the scald guard before installing the kitchen faucet.

Follow the steps below to adjust the scald guard to your preferred setting.

Notice: Easy temperature adjustment: The scald guard on the cartridge can limit the temperature of the water coming out the kitchen faucet. Depending on your model, the appearance of the adjusting ring may vary from the figure. Turn off the water supply.

Carefully lift the plastic cap ① off the handle ③ of the kitchen faucet with a small flathead screwdriver. Turn the allen screw ② counterclockwise with the allen wrench to loosen it.

Attention: Do not completely unscrew the allen screw ②. Only loosen it until the handle ③ can be easily removed. Remove the handle ③. Turn the cartridge cover ring ④ counterclockwise by hand to remove it. With an adjustable wrench, turn the cartridge nut ⑤ counterclockwise to remove it. With a flathead screwdriver, pry the scald guard ring ⑦ forward. The scald guard ring ⑦ has a slot on one side that allows it to be carefully lifted off with small needle-nose pliers.

Attention: Do not remove the cartridge ⑥. Turn the scald guard ring ⑦ counterclockwise to the desired setting, then put the scald guard ring ⑦ back on the cartridge ⑥. After the scald guard has been adjusted, turn the cartridge nut ⑤ clockwise with an adjustable wrench to screw it back on. Install the cartridge cover ring ④ and the handle ③ back on the kitchen faucet. With the allen wrench, tighten the allen screw ②. Push the plastic cap ① back into the handle ③ of the kitchen faucet.

Turn the water supply back on.

